

## SECTION H

### THE SUSPENSION

	<i>Section</i>
General description	
Anti-roll bar and auxiliary springs .. .. .	H.7
Castor and camber angles and swivel hub inclination .. .. .	H.1
Depressurizing, evacuating, and pressurizing .. .. .	H.2
Displacer units .. .. .	H.5
Hubs .. .. .	H.9
Radius arms .. .. .	H.4
Sub-frames .. .. .	H.3
Mountings .. .. .	H.6
Swivel hubs .. .. .	H.8
Tools .. .. .	End of Section