


SERVICE TOOLS


18G134. Bearing and Oil Seal Remover and Replacer (basic tool)

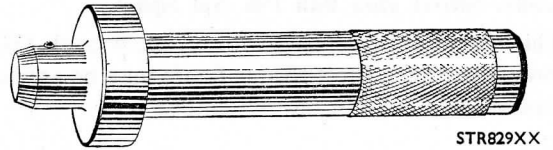

18G134

STR829XX

18G134F. Front Hub Outer Bearing Replacer Adaptor
For use with 18G134.

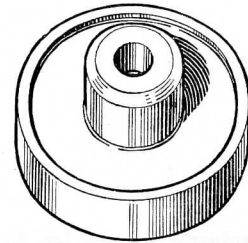


18G134F

4345G

18G134BH. Flywheel and Front Hub Oil Seal Replacer Adaptor

For the correct and easy replacement of the front hub oil seal. Use in conjunction with basic tool 18G134.

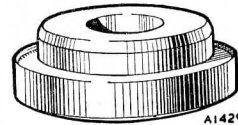


18G134BH

A1429A

18G260. Hub Bearing Outer Race Remover (basic tool)


18G260H. Front Hub Drive Flange Bearing Outer Race Remover Adaptor

An adaptor designed for use in conjunction with basic tool 18G260 for the removal of the outer bearing races from the front hub.

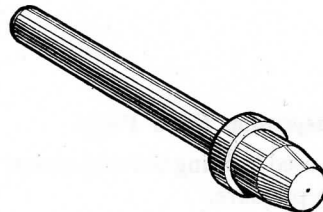

18G260

4350C

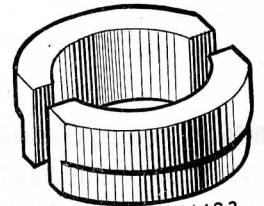


18G260H

A1423

18G304. Front and Rear Hub Remover (basic tool)

18G304B. Front and Rear Hub Remover Bolt Adaptor

Two of the adaptor bolts 18G304B are required in order to pull the rear hub from the rear radius arm.

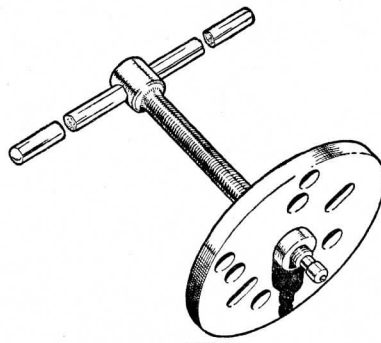

18G304

8251F



18G304B

8251