


### 18G587. Swivel Hub Ball Pin Nut Spanner


This socket must be used with torque wrench 18G372 in order that the correct torque figure may be applied to the swivel hub ball nut on reassembly.

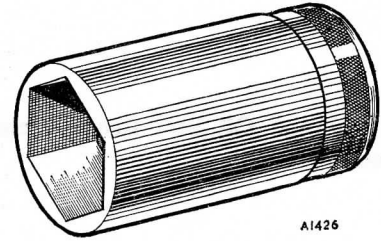

A1426

18G587

### 18G682. The Hydrolastic Suspension Service Unit

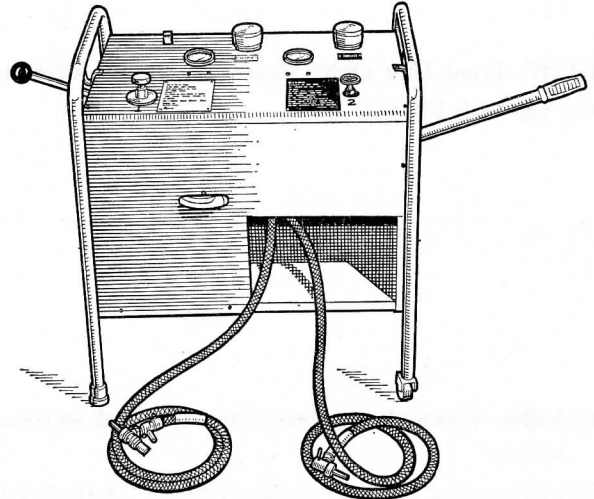


A9060

18G682

### 18G685. The Hydrolastic Suspension Hand Pump

This hand pump should be used to bring the suspension system up to the correct trim pressure.

It must not be used when the system has been deflated either by a leak or by dismantling. In such cases air will have been allowed to enter the system and it is then essential to use the Hydrolastic Service Equipment 18G682, as described in Section H.2.

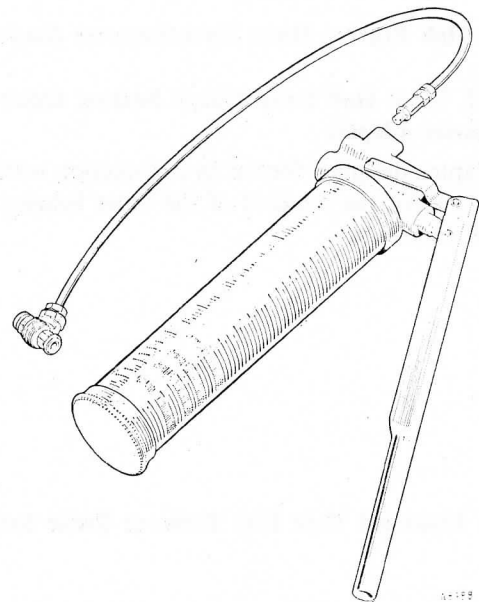

A1128

18G685