


**18G 583 B. Rear Radius Arm Needle Bearing Remover  
Adaptor**


For use in conjunction with Service tool 18G 583 when removing the needle bearing outer race on cast-type radius arms only.

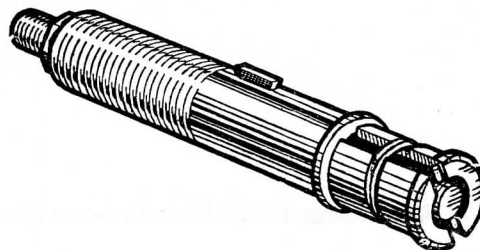

A4464A

**18G 583 B****18G 588 A. Reamer Guide Bush**


Use with 18G 588 when reaming the outer bush on the cast-type rear radius arms.

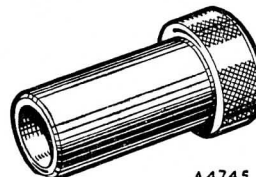

A4745

**18G 588 A****18G 620. Rear Radius Arm Needle Bearing Replacer**

This tool is essential to ensure correct fitting of the needle bearing in the cast-type rear radius arm.

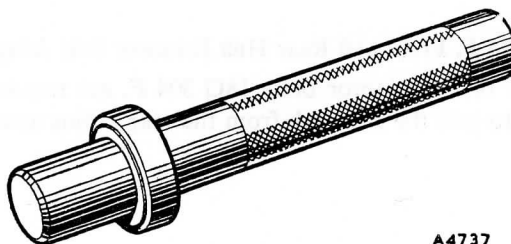

A4737

**18G 260**