


SERVICE TOOLS

18G 260. Hub Bearing Outer Race Remover (basic tool)


18G 260 H. Front Hub Drive Flange Bearing Outer Race Remover Adaptor

An adaptor designed for use in conjunction with basic tool 18G 260 for the removal of the outer bearing races from the front hub.

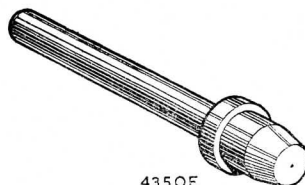

4350E

18G 260

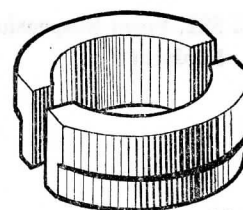


A1423

18G 260 H

18G 304. Front and Rear Hub Remover (basic tool)


18G 304 F. Front and Rear Hub Remover Bolt Adaptor

Two of the adaptor bolts 18G 304 F are required to remove the drive shaft from the hub.

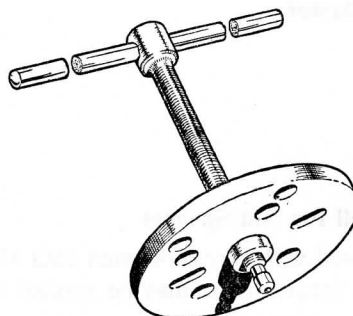

8251F

18G 304

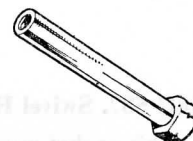


8251

18G 304 F

18G 304 P. Drive Flange Remover Adaptor


For use in conjunction with Service tool 18G 304, 18G 304 F, and 18G 284 to remove the driving flange without dismantling the swivel hub.

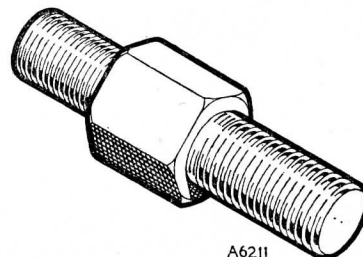

A6211

18G 304 P

18G 575. Front Hub Drive Flange Remover

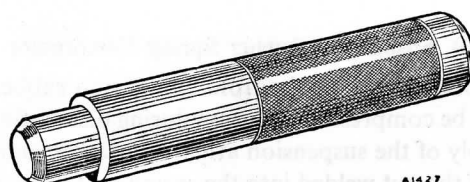


A1427

18G 575

18G 581. Front Suspension and Idler Gear Needle Bearing Remover

This tool will make the removal of a defective needle bearing from the bore of the upper suspension arm an easy operation, and at the same time avoid damaging the bore.

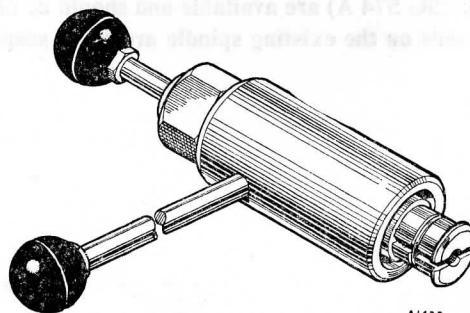

A1433

18G 581