


SERVICE TOOLS

**18G 260. Hub Bearing Outer Race Remover (basic tool)**


**18G 260 H. Front Hub Drive Flange Bearing Outer Race Remover Adaptor**

An adaptor designed for use in conjunction with basic tool 18G 260 for the removal of the outer bearing races from the front hub.

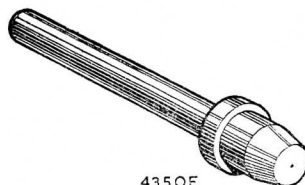

4350E

**18G 260**

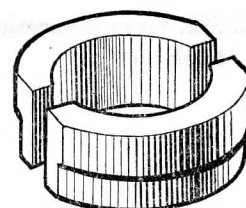


A1423

**18G 260 H**

**18G 304. Front and Rear Hub Remover (basic tool)**


**18G 304 F. Front and Rear Hub Remover Bolt Adaptor**

Two of the adaptor bolts 18G 304 F are required to remove the drive shaft from the hub.

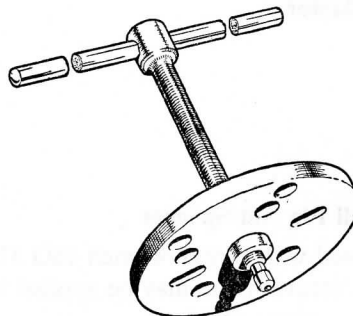

8251F

**18G 304**

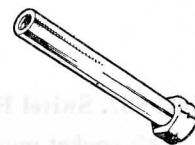


8251

**18G 304 F**

**18G 304 P. Drive Flange Remover Adaptor**


For use in conjunction with Service tool 18G 304, 18G 304 F, and 18G 284 to remove the driving flange without dismantling the swivel hub.

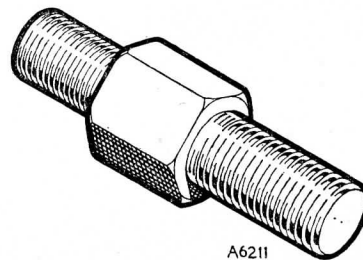

A6211

**18G 304 P**

**18G 575. Front Hub Drive Flange Remover**

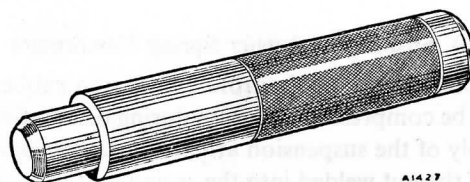


A1427

**18G 575**

**18G 581. Front Suspension and Idler Gear Needle Bearing Remover**

This tool will make the removal of a defective needle bearing from the bore of the upper suspension arm an easy operation, and at the same time avoid damaging the bore.

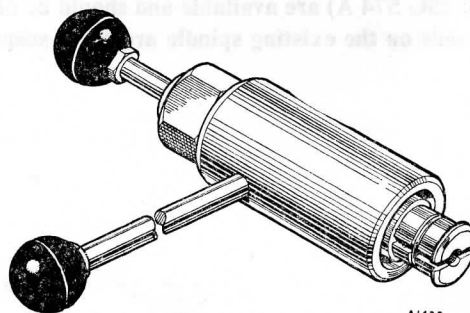

A1433

**18G 581**